 


## PRODUCT OVERVIEW

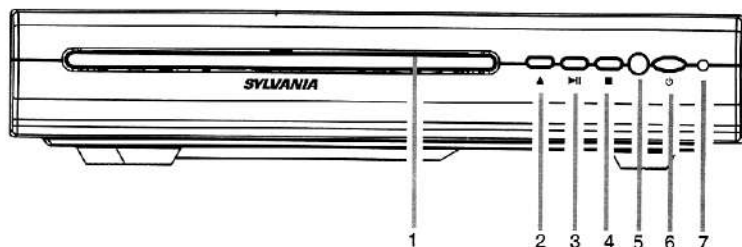

1. Disc Tray

2. Open/Close Button


3. Play/Pause Button

4. Stop Button

5. Remote Control Sensor

6. Standby/On Button

7. Standby/On Indicator

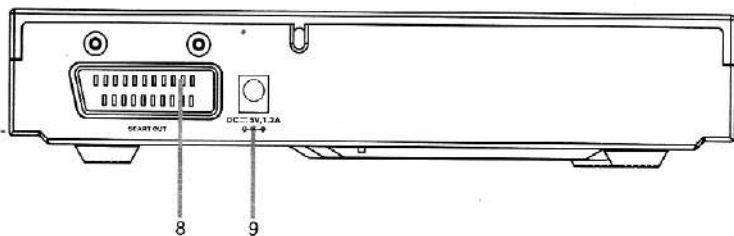


8. Scart Output Jack

9. DC IN Jack

# REMOTE CONTROL


1. Standby/On
2. Volume up
3. Volume down
4. Mute
5. Cursor up
6. Setup
7. Enter
8. Cursor right
9. Next track
10. Down cursor
11. Fast search forward
12. Play/pause
13. Title
14. Audio mode select
15. Stop
16. Return
17. Screen mode select
18. Step
19. Slow mode
20. GOTO search
21. Random play
22. Clear
23. Program
24. A-B repeat
25. Repeat
26. Zoom
27. Angle
28. NTSC/PAL select
29. Subtitle
30. On-screen display
31. Fast search backward
32. Previous track
33. Cursor left
34. Menu
35. Numeric keypad
36. Open/close

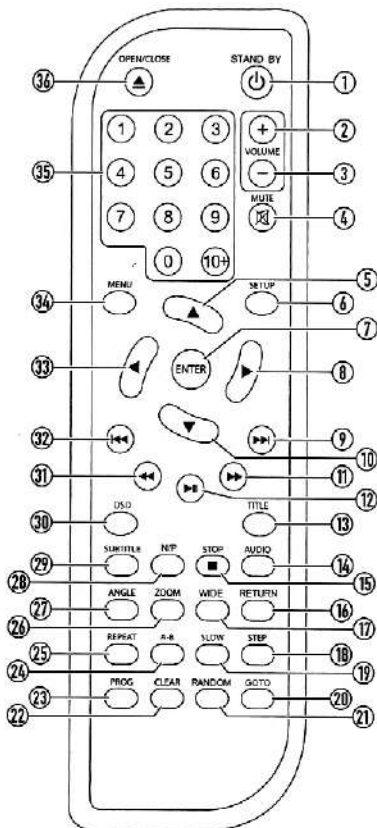

# BATTERY INSTALLATION--REMOTE CONTROL

## Battery installation:

1. Press the tab on the battery door and lift it off.
2. Install two (2) x AAA size batteries into the battery compartment as the figure on right and the polarity markings inside battery compartment.

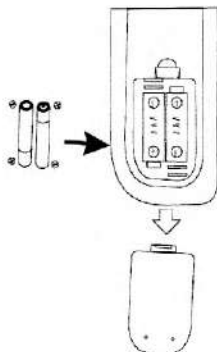


3. Replace the battery door.

## Battery Precautions:

Follow these precautions when using a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's directions).
6. Do not dispose of battery in fire. Battery may explode or leak.
7. Clean the battery contacts and also those of the device prior to battery installation.



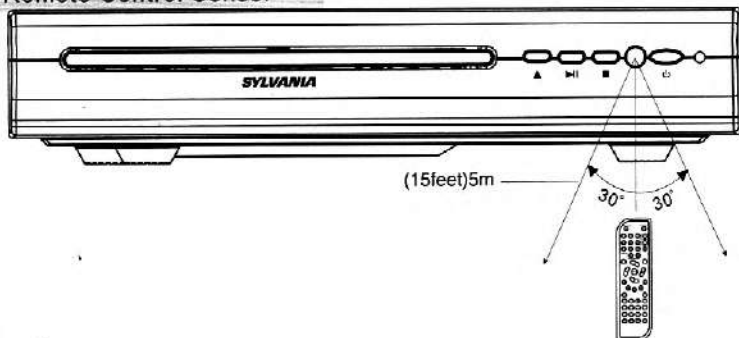

 



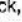 




## Remote Control Sensor

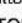


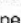 

## Remarks:

1. When there is an obstacle between the unit and the transmitter, the transmitter may not operation.
2. When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the remote control of the unit, the remote operation may be unstable.

 
 
# OPERATIONS

1. Connect the adapter to the wall outlet. Press the  button on unit to power on the unit, the indicator will turn green.
2. Press the  button to open the disc door. Place the disc on the center spindle with label side facing up. It will playback automatically.
3. During playback:
  - ~ Press the  or  Buttons repeatedly to fast search for a specific section forward/backward. Press the  Button to resume normal playback.
  - ~ Press the  or  Buttons repeatedly to skip to specific track or chapter.
  - ~ Press  Button to pause, press  Button again to resume normal playback.
  - ~ Press the STOP  Button to stop playback. The player will remember the point where disc stops. When press the  Button again, playback will start from this point. Press the STOP  Button one more time to stop playback completely, when press the  button, the unit will playback from beginning.

## Repeat Playback:

- During playback, press the REPEAT Button once; "  Chapter" will appear on the screen then the current Chapter will be playback repeatedly and continuously.
- Press the REPEAT Button twice; "  Title" will appear on the screen then the current Title will playback repeatedly and continuously.
- Press the REPEAT Button the three times; "  All" will appear on the screen then all files will playback repeatedly and continuously.
- Press the REPEAT Button repeatedly to turn off the repeat mode.

## Repeat Playback:

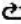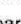
- During playback, press the REPEAT Button once; "  Track " will appear on the screen then the current playing track will be playback repeatedly and continuously.
- Press the REPEAT Button twice; "  All " will appear on the screen then all the tracks on the disc will playback repeatedly and continuously.
- Press the REPEAT Button repeatedly to turn off the repeat mode.

## (CD/DVD)Program:

1. During CD or DVD playback, press the PROG Button.
2. Using the Direction and Numeric Buttons to select and set the desired TT (Title), CH (Chapters), tracks (for CD) of the movie (music) you wants. The program menu will appear as follows:

 
DVD

1	TT:02 CH: 01	6	TT: CH:
2	TT: CH:	7	TT: CH:
3	TT: CH:	8	TT: CH:
4	TT: CH:	9	TT: CH:
5	TT: CH:	10	TT: CH:

Exit Start Next 

CD

1	02	6	--
2	04	7	--
3	--	8	--
4	--	9	--
5	--	10	--

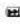Exit Start Next 

3. Using the Direction Button to select and highlight the " Start " Button on the screen, then press the OK Button to start program playback.

# OPERATIONS

**STAND BY** Press to turn on/ off the unit.

**VOLUME+/-** Press the button on remote control to adjust volume.

**MUTE** Press to turn off the sound, press again to resume.

**TITLE** Press to return to disc's title page. (It depends on the discs).

**AUDIO** During DVD playback, press repeatedly to select the desired language. (It depends on the discs).

**RETURN** Press to return to previous menu. (It depends on the discs).

**MENU** Press to return to disc's menu page (It depends on the discs).

**WIDE** Press the button to adjust the aspect ratio to adapt to the connected TV.

**STEP** During movie playback, press STEP Button repeatedly to play the movie frame by frame.  
Press the ►|| Button to resume.

**SLOW** During playback, press the SLOW Button repeatedly to set the slow motion speed. Press ►|| to resume.

## GOTO

- To select the desired Title and Chapter, press the GOTO Button once, the Title and Chapter selection menu will appear on the screen. Use the Direction and Numeric Buttons to select the desired title and chapter. The unit will play the selected chapter automatically.
- Select the desired establish time\* by Title to play, press the GOTO Button twice, the time selection table appear on the screen. Using the Direction and Numeric Buttons to enter the desired time. The unit will start the movie from the selected establish time automatically.
- Select the desired establish time by Chapter to play, press the GOTO Button three times, the time selection table appear on the screen. Using the Direction and Numeric Buttons to enter the desired time. The unit will start plays the movie from the selected establish time automatically.

**RANDOM** Press to playback randomly.

## A-B Repeat

During Playback, press the A-B Button to define where you want the section to start. Press the A-B Button again to define where you would like the section to end, the unit will then plays the selected section repeatedly and continuously. Press the A-B Button again to resume normal playback. (It depends on the discs).

## ZOOM

During movies playback, press the ZOOM Button repeatedly to zoom in/out the picture. (It depends on the discs).

**ANGLE** During DVD playback, press repeatedly to select the viewing angle (It depends on the discs).

**N/P** Press to switch to NTSC/PAL to adapt to TV system.

**SUBTITLE** During DVD playback, press repeatedly to select the desired subtitle (It depends on the discs).

**OSD** During playback, press the OSD button repeatedly to read the information of playback status.


**OPEN/CLOSE** Press the button to open or close the disc door.

# SYSTEM SETUP

In fully stop mode, press the SETUP Button. The setting menu will appear on the screen as below, press the Direction ◀, ▶, ▲, ▼ Buttons to select and highlight the function you need to set or reset. Press the ENTER Button on the remote control to enter or confirm the selection. After setting, press the SETUP Button to save the settings and exit.

General	Audio	Dolby	Video	Preference
-- General Setup Page --				
TV Display		Wide		
Angle Mark		On		
OSD Lang		ENG		
Screen Saver		On		
Last Memory		Off		
Go To General Setup Page				

## General Setup Page:

1. If TV Display is selected, using the direction and ENTER buttons to set the aspect ratio to match the connected TV. (Normal/Ps, Normal/Lb, Wide)
2. If Angle Mark is selected, using the direction and ENTER buttons to set it On or Off. If set to On, when multi-angles are available in the playing DVD, the multi-angle logo  will appear on the screen.
3. If Osd Lang (On Screen Display Language) is selected, using the direction and ENTER button to set the OSD language as desired.
4. If Screen Saver is selected, using the direction and ENTER buttons to set it On or Off. If set to On, the screen saver will come on when the unit stops or the image is paused.
5. If Last Memory is selected, using the direction and ENTER buttons to set it On or Off. If set to On, the unit will remember to continue to play from the stopped point.

## Speaker Setup Page:

If Speaker Setup is selected, press the ENTER button, the sub-setting menu will appear.

- If Downmix is selected, using the direction and ENTER buttons set it to LT/RT; Stereo as the audio output connection:
  - If set to LT/RT, the rear left or rear right channels in Dolby 5.1 recording DVD will play on both Left and Right Speakers.
  - If set to Stereo, connect the DVD player to TV through 2.1 audio connection jacks.

# SYSTEM SETUP

## Dolby Setup Page:

1. If Dual Mono is selected, using the **Direction** and **ENTER Button** to set it to Stereo, L-Mono (Play Left channel on all speakers), R-Mono (Play Right channel on all speakers) or Mix-Mono (Mixed Right and Left channel then plays on all speakers) as desired. (Functions depend on the recording of the disc).
2. If Dynamic is selected, using the **Direction** and **ENTER Button** to set the dynamic level as desired or turn it off.

## Video Setup Page:

The default Output Mode is RGB.

## Preference Setup Page:

NOTE: (Preference can be opened only when no disc is playing or the unit is in full stop mode)

1. If TV Type is selected, using the **direction** and **ENTER buttons** to set to PAL, AUTO, NTSC to match the color system of the connected TV.  
(Note: The TV system in US, Canada and Mexico is NTSC).
2. If Audio, Subtitle or Disc Menu is selected, using the **direction** and **ENTER buttons** to set the priority of the available language as desired.
3. If Parental is selected, using the **Direction** and **ENTER Button** to set the rating level as desired as follow:
  - ~ Press the **►** Button to enter, the rating level list will appear.
  - ~ Press the **▲** or **▼** Button to select the desired level.
  - ~ Press the **ENTER Button** to enter, password enter window will pop up.
  - ~ Enter the six digit password ( default password is 136900 ) by pressing the Numeric Buttons.
  - ~ Press the **ENTER Button** to save the settings and exit.
  - ~ **Rate levels:**
    1. kid saf: Kid safe
    2. G: All ages
    3. PG: Parental Guidance
    4. PG13: Parental Guidance less than 13 years old
    5. PGR: Under 17 years old, Parental Guidance suggested
    6. R: Under 17 years old, Parental Guidance strongly
    7. NC17: 17 years old or above
    8. Adult: Adult only
4. If Password is selected, press the **ENTER Button** to enter, the subsetting menu will appear.
  - ~ If **Password Mode** is selected, using the **Direction** and **ENTER Button** to set it On ( activate the rating level setting ) or Off ( Password is needed ).
  - ~ If **Password** is selected, press the **ENTER Button** twice to enter. The **New password setting** menu will appear.
  - ~ Enter the six digit password. The **Column of new Password** will be highlighted.
  - ~ Enter the new six digit password. The **Column of Confirm Pwd** will be highlighted.
  - ~ Enter the new password again. **OK Button** on the screen will be highlighted. Press the **ENTER Button** to save the setting and exit.
5. If **Default** is selected, using the **direction** and **ENTER buttons** to reset all setting to factory setting.