
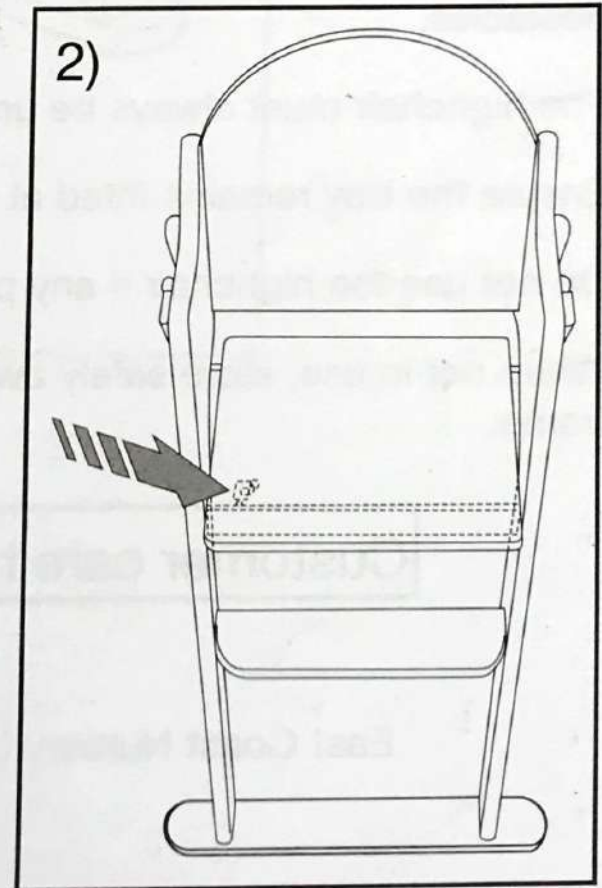


When using the chair as a Highchair, the child must always wear the waist, shoulder and crotch straps provided. Ensure that the two ends of the waist strap are fastened into the buckle on top of the crotch strap and the shoulder straps are attached to the two halves of the waist straps as shown. Adjust for security. Ensure that the straps run directly from the attachment points on the chair to your child's body and are not passed around any part of the highchair or any cushions or inserts you are using.

To fold the highchair for storage;

- 1) Pull out the tray securing knobs and fold the tray over to the rear.
- 2) Reach under the seat and release the seat catch whilst lifting the seat and folding the legs together.

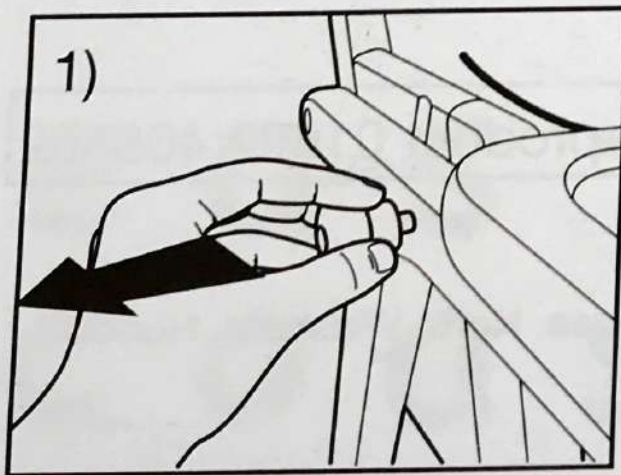

To clean the highchair, the use of a damp cloth is recommended. The appearance of the highchair will be maintained by the occasional application of a wax polish.

No lubrication of the locking mechanism is necessary.

Periodically check the highchair for; security of all components, correct operation and freedom of movement of all locking devices and excessive wear of components.

## WARNING

Your children's safety is your responsibility.

This highchair has been designed to meet the standard of BS EN 14988:2006 + A1:2012.

Do not leave the child unattended when using this highchair.

Do not use this highchair until your child is able to sit up unaided.

Do not place too close to a source of heat such as electric bar fires, gas fires etc.

Do not use the highchair unless all components are correctly fitted and adjusted.

Ensure that the child is always restrained by the crotch, waist and shoulder straps provided.

Do not position in close proximity to trailing flexes, electric irons, ornaments or other obstacles.

The highchair must always be used on a stable level surface.

Ensure the tray remains fitted at all times when in use.

Do not use the highchair if any part is broken, torn or missing.

When not in use, store safely away and do not allow to be used as a toy or climbing frame.

Customer care hotline for this product 01692 408802